

<u>Illustrated instructions on replacing a</u> <u>Igniter Assembly in a 91-94 Mercury Capri</u>

(For newbies)

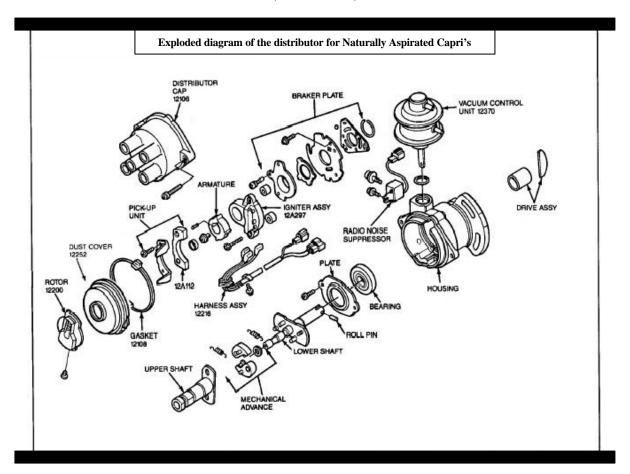



Step 1: Remove the two screws that hold the distributor on. One on top, as indicated, and one underneath.

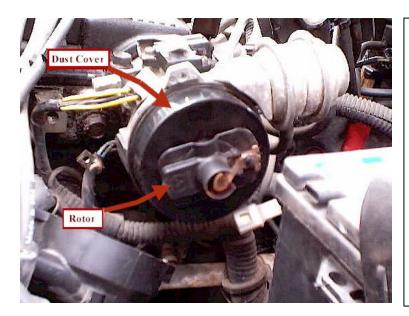

Step 2:
Remove Rotor &
Dust Cover.
*Rotor:
Pull straight off
*Dust Cover:
Twist to the left and

Step 3: Remove the Armature


The right way... (Jaw Puller may be available as a loaner tool at your local auto parts store)

2-JAW PULLER DB0L-1002-L

My way..... Using two flathead screwdrivers (not recommended)

pull



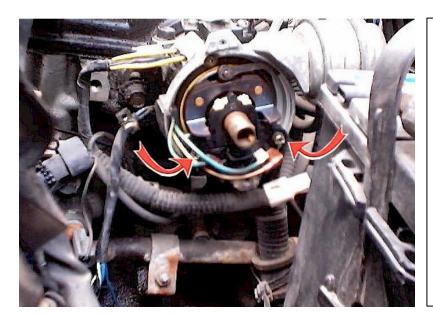

Step 4: Remove the two screws holding the Igniter, (*Note the position of the three wires before disconnecting them), and replace the Igniter module. Reconnect the wires.



Igniter Module Part #: 12A297B



Step 5: Re-install the Armature Using a socket, press the Armature onto the Upper Shaft until it bottoms out.

Step 6: Re-install Dust Cover, Rotor, and Distributor Cap. *It is recommended that you replace the latter two with new parts only.



It is also recommended that you replace the Ignition Control Module, if your Igniter is bad.

It is mounted to the top of the distributor.

Part #: 12A297C



By: Eddie Clemerson notso_fast_eddie@yahoo.com